

EXHIBITION MANUAL

Technical guidelines and general information

TABLE OF CONTENT

1. DELIVERIES, IN-HOUSE TRANSPORTATION AND SHIPPING INSTRUCTIONS	4
1.1 Transport of stand construction materials and exhibits to and from the premises	4
1.2 Use of freight elevators.....	5
1.3 Use of passenger lifts and escalators	5
1.4 Storage of empties.....	5
1.5 Vehicles and forklifts.....	5
1.6 Parking	5
2. EXHIBITION AREA TECHNICAL SERVICES.....	6
2.1 General information	6
2.2 General information on stand construction.....	7
2.2.1 Build-up of stands – general.....	7
2.2.2 Maximum construction heights.....	8
2.2.3 Stand assembly guidelines.....	9
2.2.4 Utilities	9
2.2.5 Approval of construction	9
2.2.6 Suspension points/rigging – general	9
2.2.7 Connection to electricity supply	10
2.2.8 Water	10
2.2.9 Compressed air.....	11
2.3 Dismantling and removal	11
2.4 Cleaning and waste disposal.....	12
2.5 Damage and insurance.....	12
3. FIRE AND SAFETY REGULATIONS (INCL. DECORATION/MATERIALS).....	13
3.1 Scope.....	13
3.2 General principles	13
3.3 Note.....	13
3.3.1 Table 1: Classification and testing standards for decorations and materials	14
3.4 Requirements for decorations	14
3.4.1 Table 2: Requirements for decorations and brought-in materials at events	14



3.4.2	Table 3: Minimum requirements for materials, in accordance with applicable standards	15
3.4.3	Safety certificate or report	15
3.4.4	Responsibility	16
3.5	Motor vehicles in the exhibition area	16
3.6	Smoking ban	16
3.7	Flammable products	16
3.8	Open fire / Pyrotechnics	17
3.9	Hot work / Heating/cooking	17
3.10	Emergency exits	17
3.11	Goods not allowed	17
3.12	Combustion engines	17
3.13	Storage of flammable goods	17
4.	RESPONSIBILITY	17

The following technical guidelines shall apply as soon as the Contractual Partner has hired rooms and facilities for exhibition purposes. An exhibitor in the meaning of these technical guidelines shall mean every exhibitor who is active on the premises of Austria Center Vienna by reason of the event described in the Agreement Concerning the Event.

Where the exhibitor is not the Contractual Partner, the Contractual Partner is obliged to require each exhibitor and all involved subcontractors to comply with these technical guidelines. In case of any violation of these guidelines or resulting damages etc. the Contractual Partner will be held accountable.



1. DELIVERIES, IN-HOUSE TRANSPORTATION AND SHIPPING INSTRUCTIONS

1.1 Transport of stand construction materials and exhibits to and from the premises

The exhibitor is responsible for the transportation of exhibits and any stand construction materials to and from the premises at their own expense and risk. Deliveries must arrive shortly before scheduled unloading and must depart promptly after loading. The Austria Center does not provide additional storage spaces. If exhibition material is delivered by the exhibitor's own freight forwarding partner, the freight forwarder must contact IML upon arrival at Austria Center Vienna, as in-house delivery is only handled by IML.

If the exhibitor is working with IML, companies delivering materials will be directly advised by them. If delivery is arranged by the exhibitor or by the exhibitor's exhibition stand builder themselves, the official set-up time for the event must be observed and Gate 4 must be used for all deliveries. For all deliveries through Gate 4 the companies need to make sure to provide suitable transportation equipment (like pallet jacks etc.) as the Austria Center does not provide that.

The following access route should be used:

After entering the "Leonard-Bernstein-Strasse" continue to the end of the tunnel and turn right at the sign for "Saturn Tower" in front of a height barrier of 2,20m. You will then come to a goods vehicle parking area and the sign for the IML office (Tor 1/Gate 1). Deliveries through IML must be done only via the dedicated IML delivery entrance (Tor 1/Gate 1), must be announced in advance and loading slots must be booked accordingly. In exceptional cases, delivery is also possible via the delivery entrance (Tor 4/Gate 4) on the other side of the building (height limit of 3,90m). Please be aware that loading/unloading at Gate 4 can only be handled by the exhibitor. Neither transport goods like pallet jacks nor staff can be provided. Please be aware that the area in front of Gate 4 is not a parking area for any vehicles and therefore only available for loading/unloading.

Night-time noise regulations: Please make sure everyone's attention is expressly drawn to the need for the Contractual Partner, Exhibitors and other Suppliers to comply strictly with the night-time noise regulations. Noise restrictions generally apply between 10pm and 6am. All outdoor loading activities on the ACV premises must be done/completed before/after 10pm/6am.

Information on lorry driving bans can be found at: <https://www.asfinag.at/traffic/hgv-bus/lorry-driving-bans/>

For deliveries to Hall X5 vehicles may only use the access ramp to Bruno-Kreisky-Platz one at a time and with a gross vehicle weight of 38 tons. Austrian traffic regulations must be observed. It is forbidden to leave engines running. Exhibitors shall not be entitled to compensation for any waiting times. Trucks/Goods vehicles may only be parked on Austria Center Vienna's premises in exceptional cases, and with the written permission of Austria Center Vienna. In connection with exhibiting in Hall X5 please be aware that in some cases the assignment of traffic guards is a necessity to ensure a smooth handling for all parties and guarantee the safety of the pedestrians. The costs will be charged to the contractual partner. Instructions given by Austria Center Vienna must be followed at all times.

Freight elevators are located at Gate 1, Gate 4 and downstairs below Hall X3 to deliver the goods to the correct level. IML should be contacted if forklift rental is required and for any other in-house transportation services, as well as for storage of empties.



1.2 Use of freight elevators

The Austria Center Vienna has 6 freight elevators available. Four of them are located inside the building, two are in the exhibition halls leading from level -3 to Halls X3 and X4.

Exhibition materials may be brought into the freight elevators, each with a maximum payload of 3 tons. Two freight elevators allow delivery of materials directly to Halls X3 and X4 from the truck and vehicle parking area. Materials are brought into Halls X1, X2 and X3 also at street level. Freight elevators may not be used to transport people. Instructions given by Austria Center Vienna staff must be followed at all times. Austria Center Vienna accepts no liability in the event of any contravention of these regulations. All freight elevators inside the Austria Center Vienna and in the Exhibition halls can only be operated from outside, with a key. The keys are available at Gate 4 and will be handed out after signing a form. All keys must be returned immediately after finishing all deliveries as there is only a limited amount available. Freight needs to be stored and secured within the yellow lines in the elevator. The elevator must be called from the level to which the freight needs to be delivered. All freight elevators have the following dimensions: 6.20m (length) x 3.20m (width) x 3.10m (height).

Depending on the size and position of the exhibition spaces please be aware that in some cases the assignment of elevator guards is a necessity to ensure a smooth handling for all parties. If and when elevator guards are needed will be agreed with the Austria Center Vienna in advance.

1.3 Use of passenger lifts and escalators

Passenger lifts and escalators may not be used to transport heavy freight, goods or equipment.

1.4 Storage of empties

Empties must be stored directly with IML, an external partner of Austria Center Vienna. The Austria Center Vienna does not provide any additional storage facilities.

1.5 Vehicles and forklifts

Vehicles and forklifts are not allowed inside exhibition areas. Only forklift trucks operated by IML are permitted within the loading bay. Only pallet jacks and trolleys are permitted in the exhibition areas. Halls X1, X2 and X3 are accessible at street level. Considering the limited number of delivery entrances, please respect the clearways and waiting times. All exhibitors, including those that prefer to carry out unloading themselves, must apply for loading and unloading slots. Please contact IML directly for your loading and unloading slots. Exhibitors must respect and consider delays or waiting times if no slots are agreed with IML.

1.6 Parking

Trucks and vehicles higher than 2m: parking spaces are available at the Parking lot West (located next to Gate 1) on a first come, first serve basis until further notice and must be agreed upon in advance with the Austria Center Vienna. Please also note that parking spaces cannot be reserved and therefore can be occupied. Also, trucks must always be placed in the most space saving manner and contact details of the drivers (Name, Phone number) must always be placed in the front shield.

All other vehicles and cars lower than 2m must use the Austria Center Vienna's parking garages.



Information regarding access and fees can be found online:

[Delivery Map | Austria Center Vienna \(acv.at\)](#)

[How to reach us | Austria Center Vienna \(acv.at\)](#)

(For detailed information and prices scroll down to our download area on our Website)

2. EXHIBITION AREA TECHNICAL SERVICES

2.1 General information

Load-bearing capacity of the floor is 500kg/m² in all areas (incl. the forecourt). In exceptional cases that require the approval of the Austria Center Vienna and the engagement of a structural engineer, the costs of this must be borne by the exhibitor or the organizer.

In Halls X1, X2 and X3, power supplies and other utilities are supplied to stands via the ceiling, from the hall walls or along the pillars. In halls X4 and X5 it is a mix between ceiling and floor resp. along the four big pillars in X5, depending on the position.

Water connections are only available at a selected number of locations. The requested position must be announced well in advance and must be approved by the Austria Center Vienna.

Roofs may be built on single-story stands provided that the roofing complies with the fire regulations. A possibly needed static calculation must be presented together with the drawings and reports in advance.

For rigging the organizers as well as the exhibitors are obliged and required to use the venue 's ceiling grid for the preparation of the rigging points which must be announced as early as possible. The Austria Center Vienna reserves the right to deny rigging requests in case the instructions and rules are not followed (please see separate rigging point information kit). All exhibition halls have pillars – for exact positions and measurements please see the official floor plans. The exhibition halls have areas with limited daylight and areas with no daylight.

The floor in exhibition halls X1, X2, X3 and X4 is covered with asphalt and a grey sealing on top. The floor in hall X5 is mainly made of wooden boards. It is recommended that exhibition spaces are carpeted – especially in Hall X5. Tape used to fix carpet must be fully removable. If tape is used that is not fully removable or leaves traces, additional cleaning costs will be incurred.

Please find here a recommendation for a suitable tape:

3M™ Double Coated Tape 9195 (Producer: 3M Company) or **ORABOND® 1362** (Producer: ORAFOL Europe GmbH)

Oil, grease, paint and similar substances must be removed from the floor immediately. The hall floor may not be painted or drilled, nor may anything be stuck to it which is not completely removable. All additional costs for any kind of contaminations will be charged to the contractual partner upon actual expenditure.



2.2 General information on stand construction

2.2.1 Build-up of stands – general

Austria Center Vienna makes the stand area allocated to the exhibitor available without structures, technical equipment or furnishings. The exhibitor is responsible for assembly and furnishing of the stand and for all required technical equipment. The construction and furnishing of the stand is at the exhibitor's discretion, always subject to the instructions in this Manual and the legal regulations regarding safety, permitted furnishings and general appearance.

ONLY for events and exhibitions which are subject to the Vienna Events Act and/or the Vienna Event Venue Act:

Exhibitors wishing to construct their own pavilions on the premises must obtain the permission of the Baupolizei (building inspectors). The proposed location, construction and design of such structures must be agreed with Austria Center Vienna before application to the Baupolizei.

Austria Center Vienna accepts no liability for the safety of the design or construction of exhibition stands or the equipment contained therein. Any requirements for alterations to the structure, furnishings and equipment of the stand and any special operating requirements imposed in the interests of public safety by the external and/or internal authorities during the official inspection must be complied with by the exhibitor promptly, before the start of the event, and at the latest before the subsequent final inspection.



2.2.2 Maximum construction heights

In the exhibition area inside the building:

Entrance Hall I/II/III:	2,80m/2,60m/2,40m	Higher/lower area
Entrance Hall IV:	5,00m	
Halls E/F:	5,00m/2,50m	Higher/lower area
Halls D/G/K:	4,00m/2,00m	Higher/lower area
Foyers A/B/C:	2,80m/2,50m	Higher/lower area
Foyers D/G/K:	3,50m/2,00m	Higher/lower area
Corridors Level 1:	2,00m	
Corridor Foyer D/Hall X2:	2,50m	
Foyers E/F:	2,80m	
Corridor Level 2:	2,30m	
Gallery:	2,50m	
Foyers M/N:	2,80m	
L-Rooms/Areas Level 1:	2,60m	

In the exhibition halls:

Hall X1:	3,50m	
Hall X1:	2,50m	At smoke barrier
Hall X2:	3,50m	
Hall X3:	5,50m	
Hall X4:	6,50m	
Hall X5:	7,00m	



2.2.3 Stand assembly guidelines

All entrance and exit doors to the halls, including emergency exits, escape routes, passageways, staircases, etc., must be kept free and unobstructed at all times in their complete width. Fire safety equipment such as portable fire extinguishers, fire alarms and hydrants must be visible and accessible at all times. Fire safety equipment may not be obstructed or enclosed by structures. Stands may be constructed using the exhibitor's own materials, as described in section 6.12 of the General Terms and Conditions of Contract. It is not permitted to drill, insert screws or hammer nails into the building's walls, ceilings, floors or pillars. Stands and exhibits may not impose loads on walls, pillars, windows or doors, nor may adhesives be used on these features of the building. The hanging of lightweight suspended ceilings, advertisements, banners and light fittings, etc. is not possible in all exhibition areas, and is only permitted subject to written request and approval by Austria Center Vienna. The necessary wall or ceiling mounts for hanging such items must be installed by Austria Center Vienna staff. The exhibitor or organizer shall bear the costs incurred. Pillars may be covered up to the maximum permitted construction height, if they are not damaged in the process. Combustible materials such as jute, crepe paper, cardboard, corrugated cardboard, reed mats or flammable plastics may not be used to construct or cover stands, or for decorative purposes. All items brought onto the premises must comply with the applicable fire safety regulations. Special protective measures must be taken in the aisles of the exhibition space, during build-up and breakdown, or otherwise special care must be taken to prevent damage to floors. Wood cutting and shaping tools must have dust collector bags. Painting and wallpapering is only permitted in the exhibition halls if the floors are first covered using PVC sheeting or any other protective material.

2.2.4 Utilities

Special requirements for electrical or water connections etc. can only be met where permitted by the official regulations and the technical services in the exhibition halls. Such services shall be provided at the exhibitor's expense. Requests must be made in writing. The installation of all such connections requires Austria Center Vienna's permission, and may only be undertaken by skilled personnel employed by Austria Center Vienna, or by approved Austria Center Vienna specialist subcontractors on behalf of and for the account of the exhibitor. No changes to such connections by the exhibitor are permitted. The exhibitor must comply with the rules and regulations of the Austria Center Vienna and the electricity or water companies etc. Austrian safety regulations must be complied with. Infringements of regulations will result in the immediate disconnection and removal of the connection, and the exhibitor shall not be entitled to claim damages. A three-phase power supply with approx. 3 x 400/230V and alternating current with 230V and 50Hz frequency with TN earthing are available. There are residual current circuit breakers in the exhibition halls. Austria Center Vienna shall not be liable for any loss or damage resulting from technical defects. In the event of non-compliance with these regulations and instructions Austria Center Vienna may, after expiry of due notice given for remedy of the breach, make any improvements or modifications it deems necessary, at the exhibitor's expense.

2.2.5 Approval of construction

It is the exhibitor's responsibility to send a drawing of the proposed stand construction (floor plan and elevation) for approval, at their earliest convenience. Apart from shell scheme stands, this regulation applies to all self-constructed stands and all stand assemblies that include rigging. Two-story constructions are only possible in Halls X3, X4 and X5. For approval (when not handled through the organizer or the organizer's Exhibition Service Partners) please contact the responsible ACV project manager.

2.2.6 Suspension points/rigging – general

Suspension points may be mounted in the exhibition halls and in the center of the Entrance Hall (Part IV). All suspension points must be examined and approved by Austria Center Vienna. The weights of suspended objects must be supplied for this purpose within a fully dimensioned plan (CAD, PDF etc.). All Exhibition Halls are equipped with a ceiling grid, from which objects can be suspended by the exhibitors via the hanging points



which are prepared in advance by the Austria Center Vienna. All suspended objects need to be inspected and approved on-site by a structural engineer (at the organizer's expense) once mounting is completed. The appropriate date and time will be agreed between the Austria Center Vienna and the organizer. For more detailed information please see the separate Information kit for rigging points.

2.2.7 Connection to electricity supply

To provide any power connection the type of connection required should be indicated on the order form, and all the connections required for electrical devices, lighting, etc. should be listed. To make sure that power connections are available at the right locations, a dimensioned plan must be provided together with the order form, indicating the required position and connections on the service sheet for the technical layout. If no exact position was received the connections will be prepared to the electrician's best knowledge. If there are changes of the positions afterwards, they will be charged upon actual expenditure.

Electrical installation work can be ordered from our external partners or from a licensed electrical firm of the exhibitor's choice, which must submit a report on the electrical wiring installed („Elektrobefund VD 390“) upon request to the Austria Center Vienna staff on the last assembly day at the latest (see House Rules & Regulations), including details of all connections installed.

Please note that all stand builders are obliged to install the earthing for all metal objects etc. according to the valid regulations. The ACV electricians will do visual checks for the earthing and other potential sources of error as well and if there is not a proper installation it will be pointed out to the stand builder. If the stand builder does not have the possibility to readjust their installation or conduct proper repair work the ACV electricians are obliged to install the earthing or switch off the electricity for the particular stand, which will be charged upon actual expense. The installation of the earthing must be completed before the exhibition officially opens.

In case of small Tabletop stands or backdrop only stands where no stand builder is involved, the attached document is not mandatory. Therefore, the ACV electricians will do their obligatory visual checks for all the small stands during the set-up. If any deficiencies are noticed, the ACV electricians will point them out to the responsible person on the stand and make sure that any deficiencies will be corrected and/or defect items will be removed. If there is no way of correction via the responsible person onsite, the ACV electricians will handle it within their possibilities. Any service out of the ordinary including material supplied by the ACV will be charged upon actual expense.

All regulations mentioned above are applicable for on/in all premises and facilities of the Austria Center Vienna.

2.2.8 Water

Water pipe installations to and from the service pipes may only be carried out by employees of the Austria Center Vienna. Water connections cannot be installed in areas with parquet flooring. In the entrance hall, the total number of water connections is limited to two, and these may only be along the walls of Halls E and F (one connection on each side). The installation of the water connections must be agreed and confirmed with the Austria Center Vienna well in advance. The flat rate includes the costs of providing a connection, water supply costs, drainage connection and charges for one device/tap at the stand. Any additional device/tap connections will be charged additionally (per connection).

In case there is any repair work needed which is not connected to the material provided by the ACV, the work must be conducted via the plumber of the stand builder. The exhibitor is responsible to bring all the equipment, necessary siphons, fittings and materials for their devices etc. The Austria Center Vienna cannot guarantee for availability of different materials onsite. A flat rate per connection will be invoiced (for supply and drainage) for the duration of the event.



The fresh water is a 1/2“ pipe/hose and a cutoff valve, also 1/2”. The waste water is a 40mm / 1“ plastic pipe/hose. We have our own pumps which we install/connect with the pipes. We cannot guarantee a certain pressure for each stand – the whole system pressure is 4-6bar. Depending on the number of stands we can evaluate a possible pressure, but not guaranteed as well. We cannot guarantee a single/dedicated line since we have an overall common supply system for the exhibition halls.

Please note the following important information:

To prevent blockages, food waste and coffee grounds must not be disposed of in sinks. The exhibitor is obliged to make sure that all equipment is up to date and in a good condition. The ACV staff does not supply extra material. The ACV staff will also not do any repair work on damaged or old equipment.

Please observe the following important instructions:

All branch pipes must have a main stopcock, which must always be accessible and appropriately protected against unauthorized tampering by means of a special lock. Installation of water connections is dependent on the existence of a direct sewerage connection for the water used. Drainage of wastewater into natural springs is prohibited and may require an official permit. In some cases, mud traps and grease extractors must be properly fitted ahead of the junction of the drain with the sewer system.

All plumbing work must comply with current regulations and visual checks can be done onsite. To ensure that the taps are installed at the position where they are required, a drawn to scale plan with measurements of the water connections ordered must be submitted in advance together with the order for the connections. The exact position for each connection will be examined during set-up in case of any deviations during the planning.

Water connections in all Exhibition halls are possible, but all requirements and especially the positions must be agreed and approved with the Austria Center Vienna well in advance. Inside Hall X5 it is highly recommended to use a raised floor of min. 40mm in order to reach the requested position for the water connection.

2.2.9 Compressed air

Compressed air connections (only possible in Halls X2, X3 and X4) cannot be guaranteed and therefore they are only provided upon request. The organizer or the exhibitor must provide detailed specifications and information for the devices which require compressed air as well as the stand sketch with exact position of the required connection.

2.3 Dismantling and removal

Removal of exhibits and breakdown of stands before the end of the event is prohibited. After removing exhibits and dismantling the stand, the exhibitor must leave the hired space in the same condition it was in when it was first placed at the exhibitor's disposal. Any damages or failure to leave the premises in a clean state will be rectified by Austria Center Vienna, and the related costs will be charged to the Contractual Partner. If the stand is not vacated on time, Austria Center Vienna shall be entitled, at the Contractual Partner's expense:

- to have any materials, objects or packaging belonging to the exhibitor removed from the site
- to return the area to the condition it was in when placed at the exhibitor's disposal.

In such case Austria Center Vienna is entitled to charge the exhibitor for any other costs. The exhibitor bears the risk for any materials, goods and packaging stored on the Contractual Partner's behalf.



Materials, goods and packaging material not collected by the exhibitor within three months of the end of the exhibition shall become the property of Austria Center Vienna unless the exhibitor has reached an agreement with Austria Center Vienna or IML for the safekeeping and storage of such materials, goods or packaging. The exhibitor shall have no claim to compensation by the Austria Center Vienna on his own behalf or that of third parties if the Austria Center Vienna becomes the owner of the goods in the manner described above.

2.4 Cleaning and waste disposal

Cleaning of the aisles will be arranged by the venue once a day. Individual cleaning services for the stands are done by the Austria Center Vienna as well but must be ordered separately. Please be aware that the general cleaning of the aisles does not include carpeted spaces. The cleaning of carpeted spaces must be announced in advance (as well as stand cleaning) and causes additional costs which will be charged to the contractual partner or the exhibitor.

Services include cleaning of the floor, tables and chairs and all horizontal surfaces up to a height of 1.70m (not including exhibits and locked cabinets). Prices are quoted per square meter of exhibition space and include a thorough cleaning once before the start of the event, as well as daily cleaning (not including exhibits). Daily cleaning on event days takes place before the event opens. In case of any deficiencies of the cleaning services they can only be considered if made on the same day as the inadequacies are noticed. Any special cleaning requirements must be announced well in advance and will be charged upon actual expenditure.

Additional costs resulting from improper waste disposal will be charged to the Contractual Partner. We would like to point out that it is not permitted to dispose waste of any kind on the exhibition premises. Any materials left behind will be disposed of, without ascertaining their value, at the exhibitor's expense. Special waste disposal requirements such as medical waste etc. must be announced in advance by the organizer or exhibitor and comes at additional costs. Austrian packaging regulations that entered into force in 1993 introduced a statutory obligation to separate refuse into individual, recyclable materials. Organizers, exhibitors and stand builders are therefore required to contribute towards the avoidance of waste, and the recycling and proper disposal of waste materials at all stages of an event. Exhibitors are requested to prepare unavoidable waste for disposal by separating it by type during the move-in and move-out periods and the event itself. More information can be found on <https://www.ara.at/en/>

2.5 Damage and insurance

No part of the premises may be damaged or disfigured in any way. Should any damage occur, the exhibitor will be invoiced for the costs of repairs. We highly recommend that Exhibitors acquire sufficient insurance, such as public liability insurance covering all injuries to persons and damages that might occur in connection with the exhibition. It is also recommended that exhibitors take out additional coverage against loss or damage to exhibition materials during transportation and during the exhibition itself. Austria Center Vienna shall not be liable for any loss or damage to exhibition materials.



3. FIRE AND SAFETY REGULATIONS (INCL. DECORATION/MATERIALS)

These guidelines provide the basis for information required regarding the minimum requirements for decorations and materials at events at the Austria Center Vienna. The rules and statutory requirements in force reflect lessons learned from past incidents, and have been put in place to ensure the safety of all individuals during events.

3.1 Scope

These guidelines apply to all events and congresses that take place within the Austria Center Vienna (ACV), regardless of the size of the event or the number of participants. This includes open-air spaces outdoors that are adjacent to escape routes or assembly points.

The term “decorations” applies to:

- Event furnishings such as seating, stands and booths, lecterns, and other constructions
- Fabric coverings and curtains
- Carpets, floor coverings
- Roll-ups, inflatable pillars, stand-up displays
- Pin boards, projector screens
- Vehicle displays
- Table linen, plants, etc.

Rules and procedures for bringing motor vehicles inside the Austria Center Vienna are not covered by these guidelines, and are set out in a separate set of guidelines.

3.2 General principles

These guidelines are based on the following laws, orders and standards:

- The ACV House Rules and Fire Safety Code
- Vienna Events Act
- Vienna Event Venues Act
- Employee Protection Act
- ÖNORM EN 13501-1 Fire classification of construction products and building elements
- ÖNORM EN 13773 Classification scheme - Textiles and textile products - Burning behaviour - Curtains and drapes
- ÖNORM A 3800-1 Burning behaviour of materials excluding construction products
- ÖNORM B 3822 Burning behaviour of interior materials - Decorative items

3.3 Note

The issuance of Austrian standards ÖNORM EN 13501-1 “Fire classification of construction products and building elements - Part 1: Classification using test data from reaction to fire tests” and ÖNORM EN 13773 “Textiles and textile products - Burning behaviour - Curtains and drapes - Classification scheme” necessitated the withdrawal of ÖNorm B3800.

Based on this, the following standards currently apply:



3.3.1 Table 1: Classification and testing standards for decorations and materials

Brought-in materials	Burning behaviour	Smoke production	Droplet formation
Construction products including floor and wall	EN 13501-1 ¹⁾	EN 13501-1	EN 13501-1 ²⁾
Curtains and similar textile products	EN 13773	ÖNORM A 3800-1	EN 13773
Furniture textiles	ÖNORM B 3825	ÖNORM A 3800-1	N/A
Decoration materials	ÖNORM B 3822	ÖNORM A 3800-1	ÖNORM B 3822
All other materials	ÖNORM A 3800-1	ÖNORM A 3800-1	ÖNORM A 3800-1

Source: BRANDverhütung, March 2017 issue

¹⁾ Including floor, wall and ceiling coverings

²⁾ Not applicable to floor coverings

Please note that all testing and evaluation certificates must correspond to the current state of the art and regulations. If the standards stated here are superseded or replaced by more recent regulations, the currently applicable standard must be applied, regardless of the standards stated in the table.

3.4 Requirements for decorations

Only decorations and structures that demonstrate compliance with the following standards may be used for events:

3.4.1 Table 2: Requirements for decorations and brought-in materials at events

Parameter	General requirement	ÖNORM B 3800 (withdrawn)	ÖNORM EN 13501-1 (for construction products)
Burning behaviour:	“Non-combustible or difficult to ignite” and	B1 – hardly combustible and	A1/A2 – non-combustible or B – very limited contribution to fire and
Smoke production:	„low smoke production“ and	Q1 – low smoke production and	s1 – no smoke development and
Droplet formation:	„no droplet formation“	Tr1 – no dripping	d0 – no droplets



As the requirements of decoration materials with regard to burning behaviour, smoke production and droplet formation, according to the applicable standard, may differ, the respective minimum requirements are stated explicitly in the following table.

3.4.2 Table 3: Minimum requirements for materials, in accordance with applicable standards

Brought-in materials	Burning behaviour	Smoke production	Drip formation
Construction products incl. floor, wall and ceiling coverings	EN 13501-1: A1, A2, B	EN 13501-1: s1	EN 13501-1: d0 (not applicable to floor coverings)
Curtains and similar textile products	EN 13773: Class 1/2	ÖNORM A 3800-1: Q1	EN 13773: Class 1/2
Furniture textiles	ÖNORM B3825: Hardly combustible	ÖNORM A 3800-1: Q1	N/A
Decoration materials	ÖNORM B3822 Hardly combustible	ÖNORM A 3800-1: Q1	ÖNORM B3822 No dripping
All other materials	ÖNORM A 3800-1: B1	ÖNORM A 3800-1: Q1	ÖNORM A 3800-1: Tr1

In the event of a fire, each additional fire load that is introduced into an event space significantly increases the risks associated with smoke inhalation, which is why all materials and construction elements must be classified according to the applicable standards.

All decorations must be stable and adequately secured to prevent them from toppling over.

Escape routes must be free of decorations of any kind.

3.4.3 Safety certificate or report

The event organizers must present, on request by the Austria Center Vienna, a safety certificate or safety report for all decorations and brought-in constructions, which meets the following specifications:

- The certificate must be issued by an accredited certification body (displayed in the letterhead and identifiable in the circular stamp)
- Valid issue date / expiry date in accordance with the applicable standard,
- e.g. ÖNORM EN 13773, ÖNORM EN 13501-1
- Classification in the fire safety classes required by these guidelines
- Scope of the certificate/report, including details of the following:
 - Description of item
 - Applicant or client
 - Basis for test
 - Description of test execution
 - Evaluation
 - Classification
 - Table with test results (optional)



In line with the scope of application of national standards, test certificates must be compiled in German. However, the Austria Center Vienna also accepts test certificates issued by certification bodies accredited in other EU countries, provided they are submitted in German or English.

Safety certificates must be submitted in good time before the event, and at least one week before bringing the items onto the Austria Center Vienna premises. Decorations may only be put up and materials may only be used following authorization by the fire safety officer.

3.4.4 Responsibility

The Safety, Health & Security (SHS) department is responsible for approval and authorization of constructions and decorations for events.

3.5 Motor vehicles in the exhibition area

If motor vehicles are to be brought into the exhibition space, all technical safety precautions must be complied with and evidence of compliance in the form of the necessary official and technical permissions must be submitted to Austria Center Vienna. For all events applicable, a prior authorization by the Austria Center Vienna is required.

For petrol or diesel driven motor vehicles older than three years, the requirements are as follows: The fuel tank is to be drained and flooded with nitrogen, and the battery is to be disconnected. For each motor vehicle, the relevant Austria Center Vienna form detailing the work done is to be completed and signed by the Contracting Partner.

For petrol or diesel driven motor vehicles less than three years old, the requirements are as follows: The fuel tank may contain no more than 3 liters of fuel. The battery need not necessarily be disconnected. Flooding the fuel tank with nitrogen is only required if the authorities or Austria Center Vienna require it.

The flooding will only be conducted by the internal Fire department of the Austria Center Vienna and will be charged per vehicle.

3.6 Smoking ban

Smoking is prohibited in all indoor areas of the Austria Center Vienna, including private areas of exhibition space.

3.7 Flammable products

Notification of the handling and installation of flammable products should be given well before the event. This must be submitted in writing, quoting the name of the event and the stand number, to the exhibition organizer or directly to Austria Center Vienna. The storage and use of compressed gas and/or liquid gas in the exhibition halls or elsewhere on the premises is not allowed. Balloons filled with gas (except Helium) are not permitted on all premises of the Austria Center Vienna. Welding and spraying work within the confines of the exhibition premises is prohibited. Only fireproof adhesives may be used for glue work within the exhibition premises.



3.8 Open fire / Pyrotechnics

The use of open fires is prohibited, as are naked flames.

Explosive or pyrotechnic articles may not be used on or taken onto the premises of Austria Center Vienna, either indoors or outdoors, without written permission from the organizer and Austria Center Vienna.

3.9 Hot work / Heating/cooking

Hot work such as welding, soldering, cutting, and circular-motion grinding, drying, heating or work over a naked flame is not allowed within the Austria Center Vienna without special permission from Austria Center Vienna. Stoves, heaters and open fires may not be used for any purpose, including cooking, frying or baking. This also applies to demonstrations. Stoves and heaters can only be used in designated catering areas, which can be rented upon request.

3.10 Emergency exits

Escape routes and emergency exits (indoors and outdoors) should be kept free of any obstruction and kept in full view at all times. Fire safety signs, emergency alarm buttons, emergency exits and exit signs may not be covered by any products/company signs, decorations or stand roofs.

3.11 Goods not allowed

The following goods are not permitted on the premises of the Austria Center Vienna:

Goods causing nuisance by their smell or otherwise, or appliances emitting objectionable noises or radiating disturbing light; any hazardous objects that have not been mentioned in the stand construction design but have been introduced by the exhibitor.

Wireless communication devices (walkie-talkies, handheld microphones, etc.) may be used as long as they do not interfere with Austria Center Vienna's technical services or appliances. Exhibitors wishing to use these devices must include the brand name and frequencies to be used when submitting their stand design for approval.

3.12 Combustion engines

Any machine (generating sets, compressors, etc.) with an internal combustion engine, whatever the use, is forbidden inside the Austria Center Vienna, except for exhibited motor vehicles, subject to the guidelines above.

3.13 Storage of flammable goods

Empty packaging, refuse, wood, paper, straw, cardboard and other flammable material must not be stored in the halls.

4. RESPONSIBILITY

Exhibitors are wholly responsible for all displays and demonstrations they organize.

